




# ProScan PLT7050 Screen Replacement

Is the screen of your device cracked or not turning on? Use this guide to replace the screen

Written By: Valerie Landguth

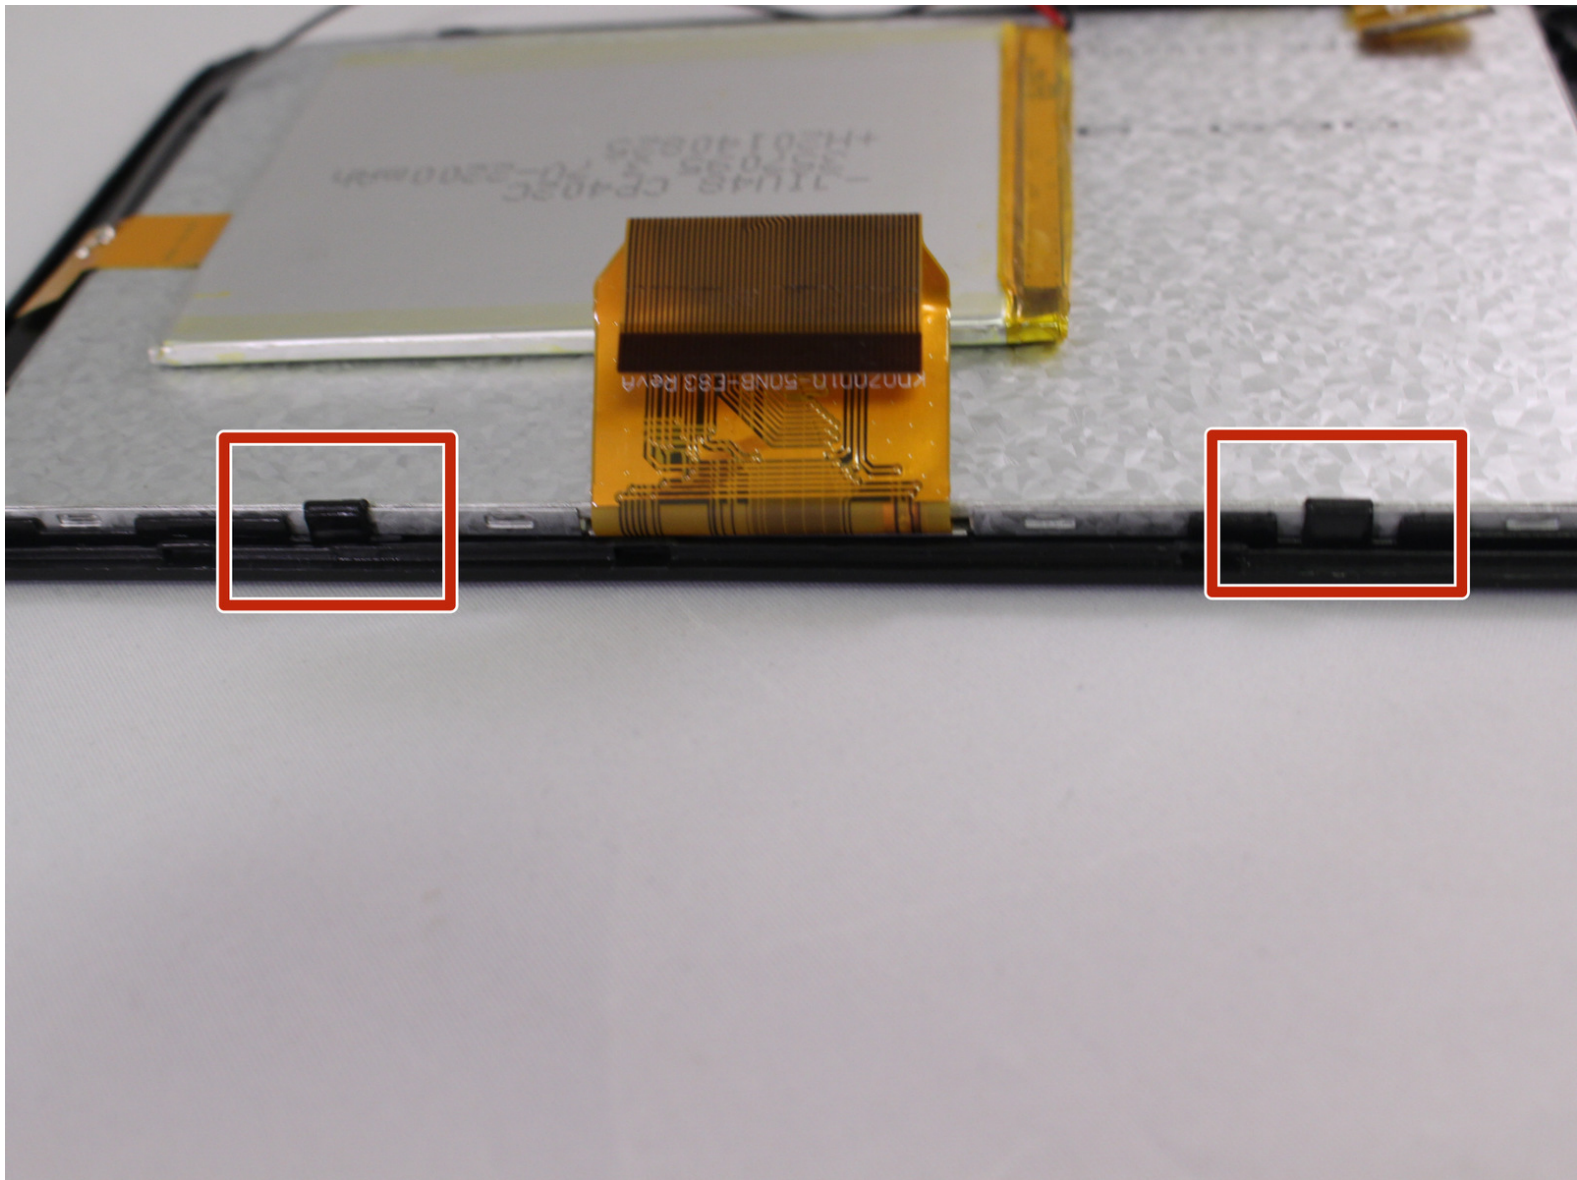

## INTRODUCTION

This is the replacement guide for the screen. If the screen is broken , use this guide to replace the screen

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Soldering Station](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Open Device



- Make sure device is unplugged and turned off while working on the device.
- Remove 2 Phillips head, 4.3 mm screws from the bottom side of the tablet with a PH00 screwdriver.



## Step 2



- Use the plastic opening tools to pry the back of the tablet open.
  - You may need to slide the tool along the sides of the device to get it to open. You might hear some popping noises, it is okay.
- i** May be helpful if you start by the microSD slot.





## Step 3 — Motherboard

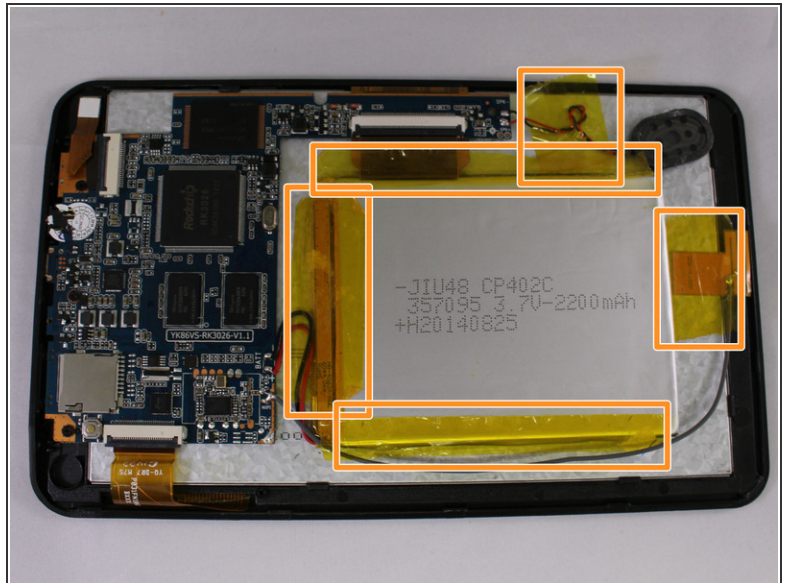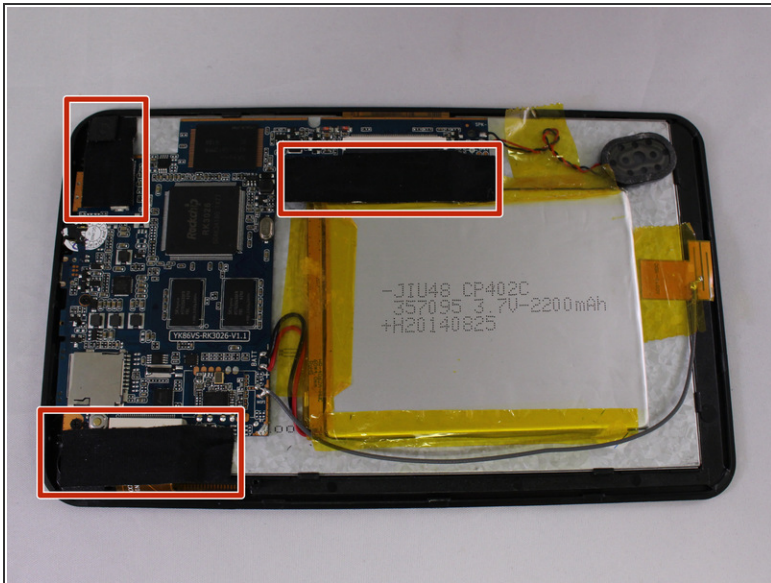

- Remove the 3 black pieces of tape from the device.
- Remove the 5 yellow pieces of tape from the device.

## Step 4

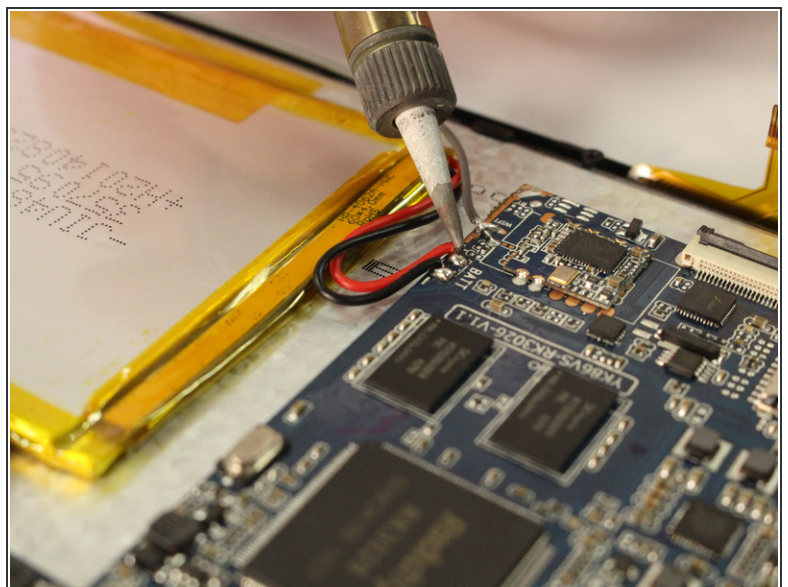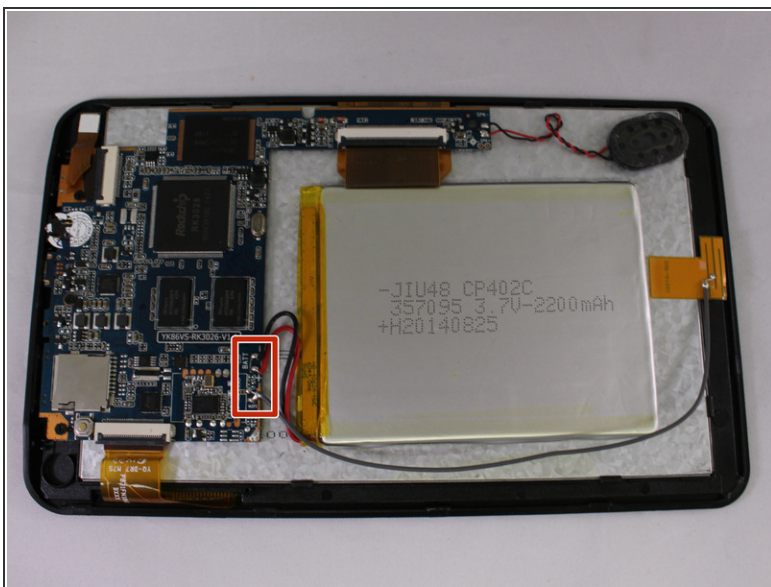



- Use the soldering tool to remove the 3 wires from the mother board to the battery (black, red, gray).



Soldering tool will get hot.




## Step 5

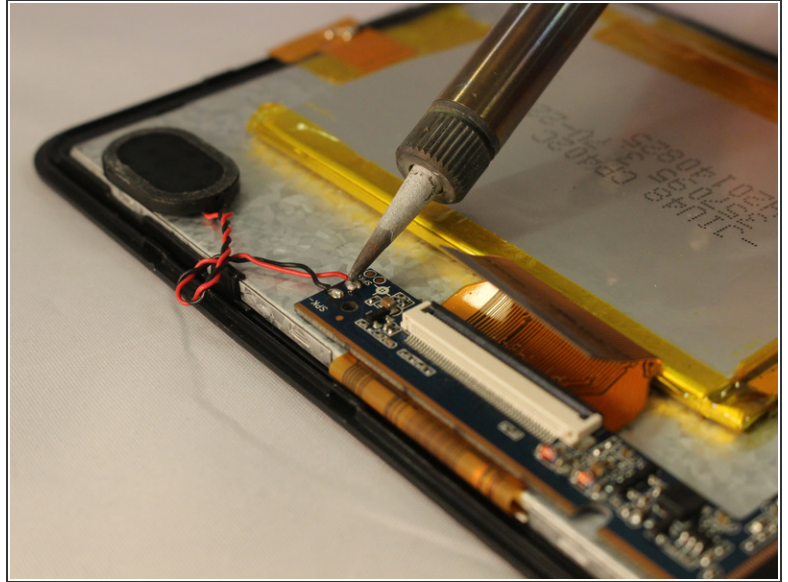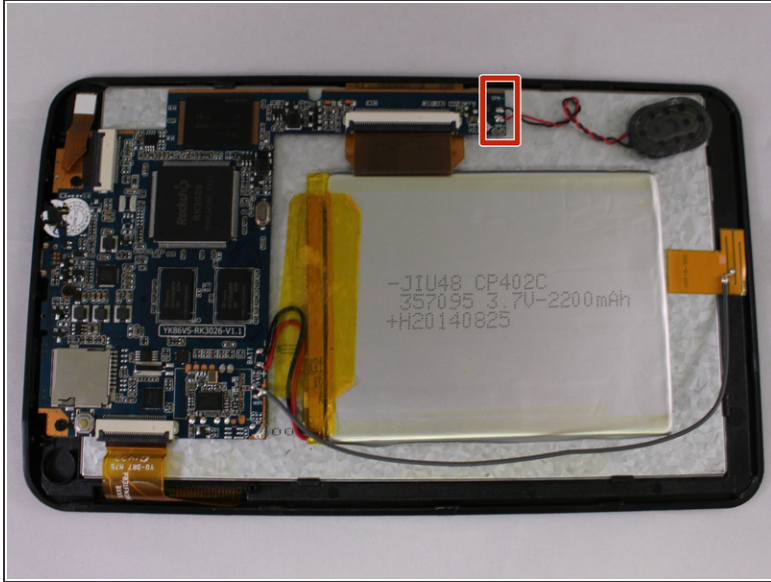


- Remove the speaker wires from the motherboard with the soldering tool.

## Step 6

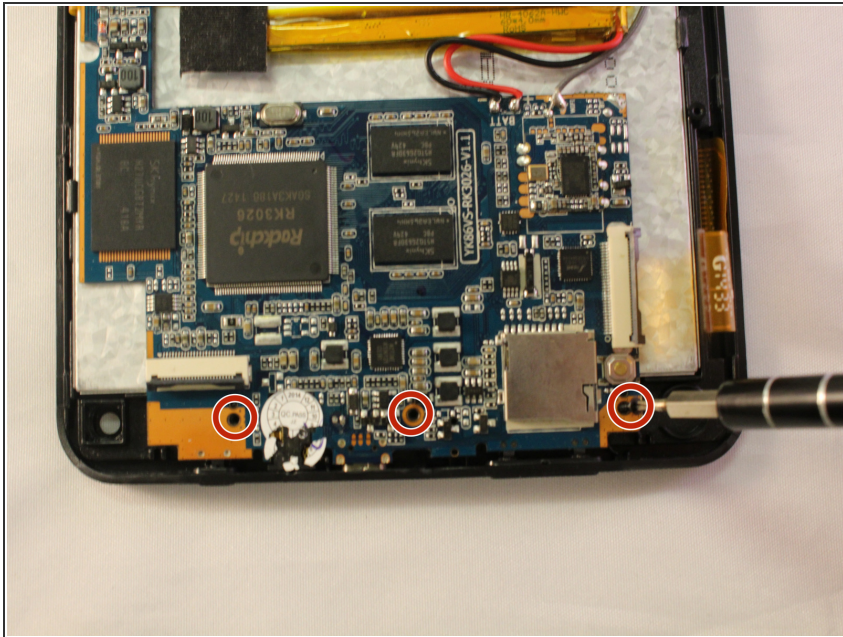


- Remove 3 Phillips head, 4.3 mm screws from the bottom side of the tablet with a PH00 screwdriver.

## Step 7

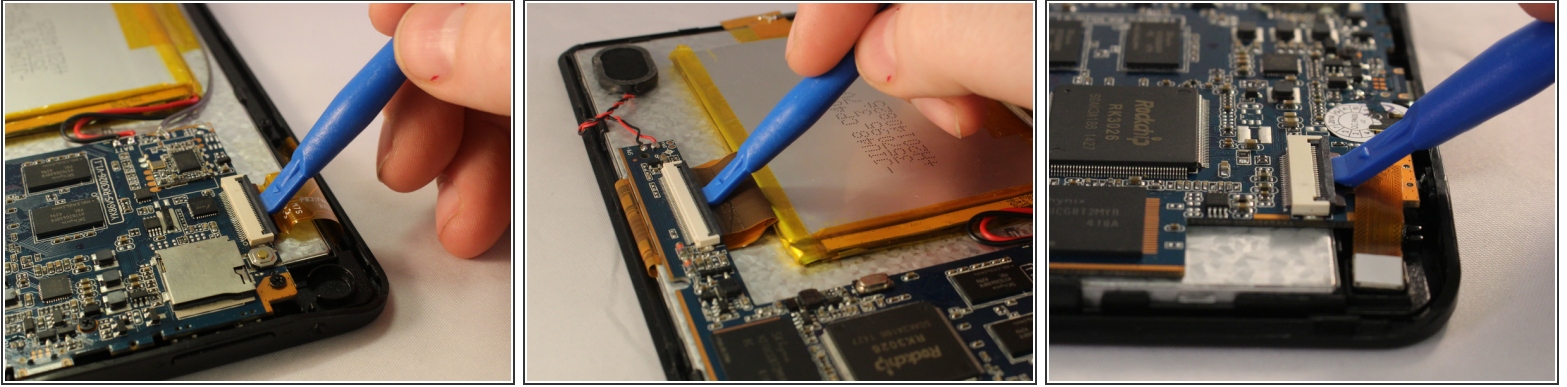

- Use the plastic opening tool to pop open all 3 ZIF connector tabs connected to the motherboard.
- Remove each ribbon from the ZIF connector port.




## Step 8

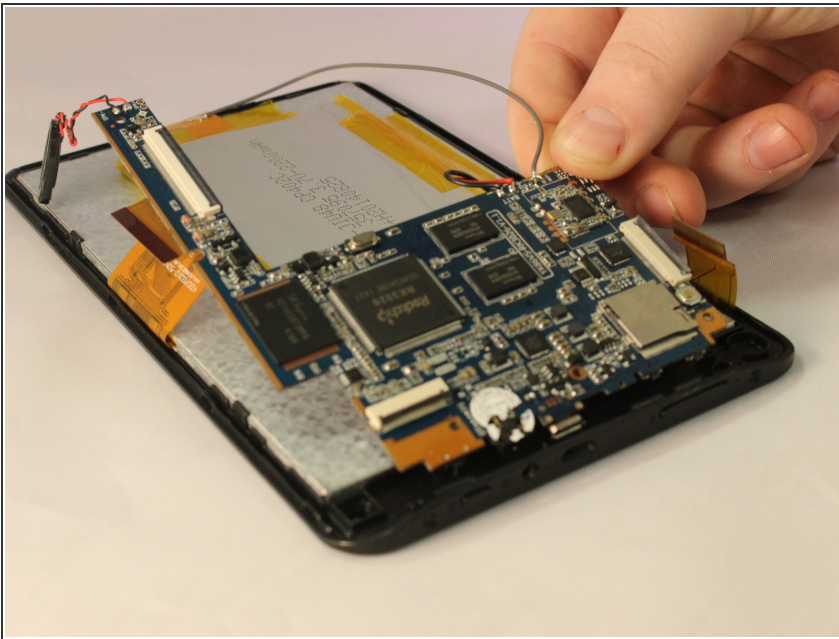

- Lift the motherboard off the device taking care to pull the ports out of the casing.




## Step 9 — Screen

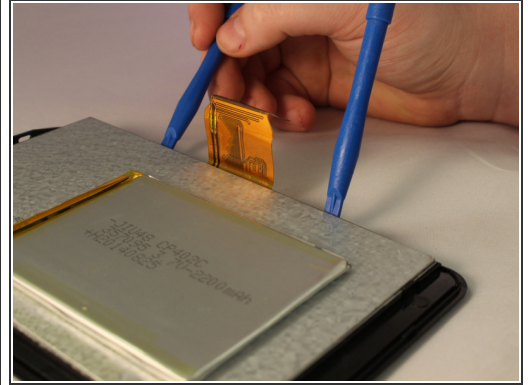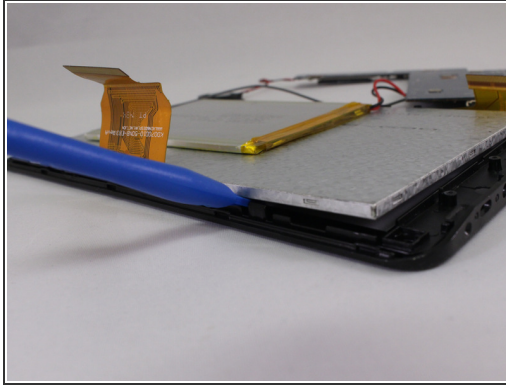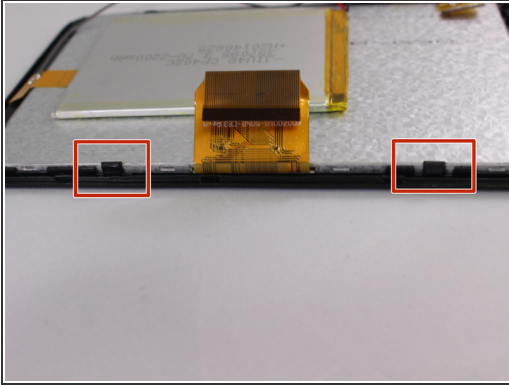

**i** You will need two plastic opening tools.

- Use one of the plastic opening tools next to one of the black clips on the side of silver screen.
- Use the second plastic opening tool to push back the black clip next to the one you have worked on. Push the second plastic opening tool under the screen.

## Step 10

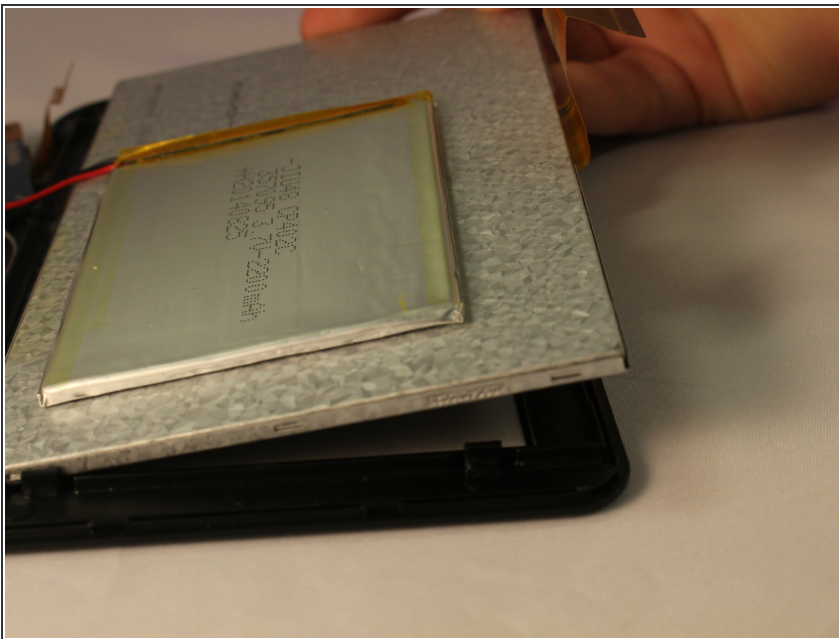

- Wiggle the screen and pull it from the casing.

To reassemble your device, follow these instructions in reverse order.

